



## WATER SOFTENER REGENERATION

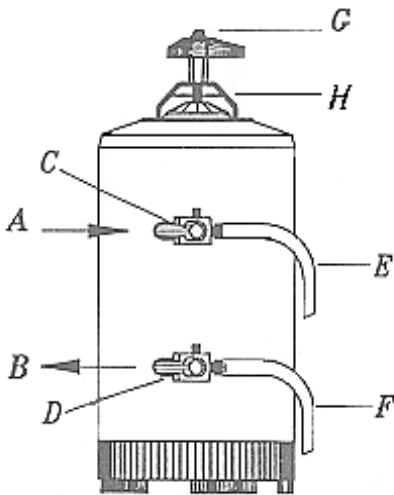


Fig.1

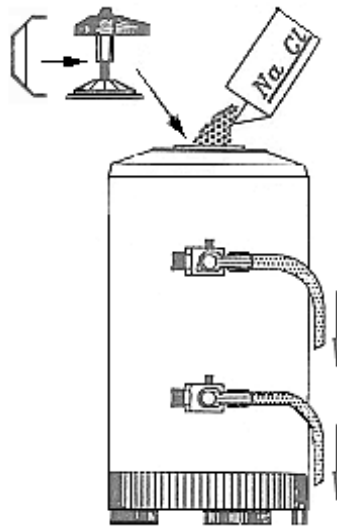


Fig.2

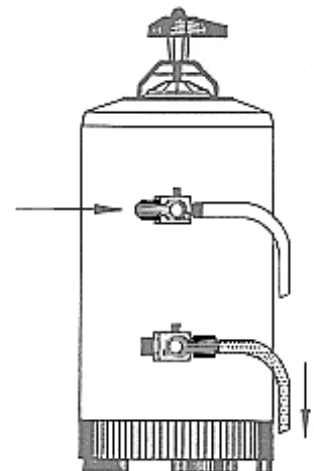


Fig.3

### TO BE CARRIED OUT WEEKLY / TWICE WEEKLY

- Make sure tubes E and F can drain into a sink or an appropriate container.
- Turn levers C and D clockwise to release **pressure** from vessel (figure 2).
- Undo lid G by turning handle anti-clockwise. Remove "bridge" H, lower lid, ¼ turn and tilt out.

### DO NOT EMPTY OUT BROWN RESIN

- Pour in granular salt - quantities listed below:-

<b>H8 - 8 litre</b>	<b>H12 - 12 litre</b>	<b>H16 - 16 litre</b>	<b>H20 - 20 litre</b>
<b>1 kilo/ 1.5 pints</b>	<b>1.5 kilo/2 pints</b>	<b>2 kilo/2.5 pints</b>	<b>2.5 kilo/3 pints</b>

- Replace lid, ensuring seal is clean. **Do not over tighten.**
- Turn lever **C** anti-clockwise (figure 3). Allow water to run from tube **F** for approximately 1 Hour **or until salt free.**
- Turn lever **D** anti-clockwise (figure 1). Regeneration is now complete.